



CLEANING YOUR MASK

To ensure continuing safety and comfort for your FlexiFit™ HC407 Mask:

BEFORE EACH USE:

- Inspect the mask for deterioration. Do not use if aged or damaged.

AFTER EACH USE:

1. Disassemble the Silicone Seal (C), Foam Cushion (D) and the headgear (H) from the Mask Base (A).
2. Wash the Silicone Seal and Mask Base in warm soapy water then rinse in fresh water.
3. Wipe the Foam cushion with a damp cloth. (Do not immerse the Foam Cushion in water).
4. Leave all parts to dry out of direct sun light before reassembling.

EVERY 7 DAYS:

1. Hand wash the Stretchgear™ headgear (H) in lukewarm water using a mild detergent. Allow to air dry out of direct sun light.

CAUTION

**DO NOT WASH THE MASK IN DISHWASHER.
DO NOT CLEAN THE MASK WITH ALCOHOL, CHLORINE OR BLEACH.
DO NOT STORE THE MASK IN DIRECT SUNLIGHT.**

The above actions may deteriorate or damage the mask and shorten its life. If your FlexiFit™ HC407 weakens or cracks, seek replacement immediately.

ASSEMBLING YOUR MASK

Your FlexiFit™ HC407 Mask is fully assembled and ready to use. However, when you need to clean your mask follow these instructions for reassembly.

1. Place Silicone Seal (C) face down onto flat surface. With thick side of Foam Cushion (D) facing down, place into Silicon Seal.
2. Starting with the slot at the apex of the Silicone Seal, assemble onto Mask Base (A). Push firmly together.
3. Lay the Stretchgear™ headgear (H) flat with the loop side down. Position the assembled mask over the headgear and attach the four straps into the corresponding slots in the Forehead Rest (F) and the Glider™ Strap (E). This can be done without undoing the Velcro™ tabs, by sliding the headgear into the slots.